


W:14.8 cm

H:19.5 cm

Tunstall

INSTRUCTIONS

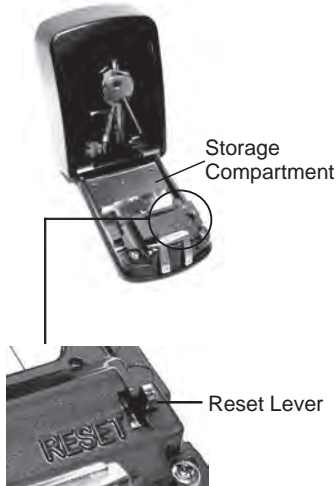

Opening

1. Open shutter hatch to reveal the dial and the opening lever.
2. Dial existing combination, otherwise factory default 0.0.0.0
3. Press down on the opening lever.

Setting new combination

1. Open the door to reveal the setting mechanism.
2. Push the reset lever left and towards you and the reset lever will stay in position.
3. Rotate dials to your preferred combination.
4. Push the reset lever up and away from you to return to original position. Double-check your combination before closing the storage compartment door.
5. Close the storage compartment.
6. Scramble the combination dials to lock the front door and conceal your combination.
7. Close the shutter hatch.

Wall mounting

NOTE: you will require a X-head/Pozi screwdriver, pencil, a spirit level, drill bit, a drill and a hammer.

1. Open the door, as above.
2. Position the lock on the desired mounting surface (see note 1).
3. Use the spirit level to check that the lock is vertical.
4. Mark the position of the screw holes on the desired surface.
5. Remove lock.
6. Drill holes.
7. Use hammer to fit wall plug. (if necessary).
8. Position lock.
9. Insert and tighten screws.
10. Close the storage compartment.
11. Scramble the combination dials to lock the front door and conceal your combination. Then close shutter hatch.



Using the pencil, mark the position of the screw holes to be drilled.

NOTES:

1. We suggest that you mount the lock in a discrete location away from direct view, such as porches, garage, out of direct eye line.
2. Keep shutter hatch closed to increase weather resistance and to conceal the dials from view.